


# Installation procedure




- 1** Before laying, let the tiles acclimated for 24 hours and level and sweep the floor.



- 2** By means of a chalk draw lines in the transverse and longitudinal direction of the room. It is essential that the tiles are kept in mutually orthogonal position.

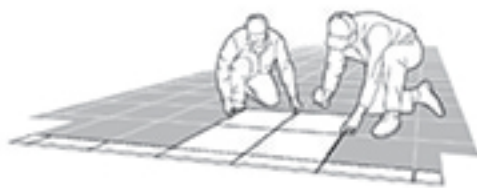


- 3** Distribute the tiles and tap with rubber hammer. Start the installation from the driveway and continue further to the room.

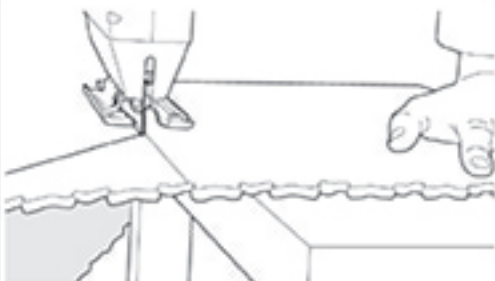

- 4** Finally cut and fit the tiles.



- 5** Leave a gap of at least 5 mm at the walls.

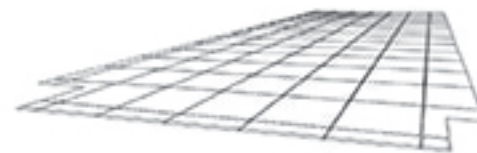

- 6** Done

